INSTALLATION GUIDE - riva DRINK WATER FILTER

Installation of a riva filter housing with integrated filter cartridge under the sink or the kitchen sink.



riva-filter.de

IMPORTANT NOTES BEFORE YOU BEGIN

Technical specifications

Dimensions: Ø 70 x120 mm Housing material: Al-Mg-Si-1 anodized Filter typ: As you ordered

Inlet G1/2 internal thread, outlet G1/2 external thread Connection: Armoured hose 3/8" ÜM 90°bend x 1/2" AG, length 40 cm FHose connection set:

Reducer 3/8" AG x 1/2" IG flat sealing

8 - 11 liter per minute at 2 - 3 bar water pressure low rate:

General instructions

The ordered delivery includes the selected filter cartridge. The cartridge is pre-installed in the filter housing. All installation work should be carried out and checked competently. riva is not liable for incorrect installation.

Ensure correct installation of water inlet and outlet. The arrow on the housing and cartridge indicates the flow direction to be observed.

No liability will be accepted for any damage caused by improper installation. Protect from frost. The filter cartridge should be replaced after 6 months (DIN 1988). Earlier replacement may, however, be necessary if the water flow is noticeably/visibly restricted. A previously necessary change is not a defect in the cartridge used, but an indication of the increased occurrence of fine particles in the unfiltered water.

For use in conjunction with a hot water boiler or instantaneous water heater, please contact your sanitary specialist. If the water filter should installed under the sink, the filter should be connected directly and professionally to the angle valve of the cold water pipe (warm water pipe is also possible). In exceptional cases, if you have very cold water in the pipe, condensation water can form on the filter housing. This is due to physical reasons and is not a defect. An installation always requires the installation of a certified check valve / inlet stop or a water stop system, e.g. Aquastop.



The riva drinking water filter set includes:

- A riva filter housing, a riva filter cartridge (usually pre-installed) and (if ordered) a riva hose connection set with adapter.
- Before starting the installation, switch off the water supply line at the corner valve (or the corresponding water line).
- Remove the filter housing incl. hose connection set from the packaging. The filter cartridge is already inserted in the housing.
- Required tools: open-end wrenches in the width across flats 19, 21, 24, 25 or our riva Tool All-in-one (can be ordered in the riva store, not included in delivery).




Installation of a riva filter housing with integrated filter cartridge under the sink or the kitchen sink.



riva-filter.de

Connection filter system

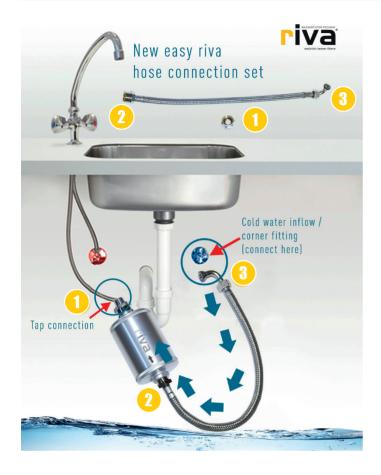

- Screw the reducer to the filter. The filter can then be connected directly to the existing hose of the water tap.
- Screw the hose of the connection set to the filter input.
- Finally, screw the end of the hose to the union nut on the angle valve. This assembly sequence is recommended, because it prevents the connection hoses from turning.

PLEASE NOTE!

 The housing must be connected in such a way that the water inlet into the filter housing is always in the direction of the arrow. (arrow on the housing)

Put into operation

- Finally, run cold water over the kitchen faucet and check the tightness of all connections.
- Flush the filter system with about 3 5 liters of water.
 Small black activated carbon particles may be flushed out during this process. This is normal production-related initial abrasion of the activated carbon, but it will disappear after this initial rinse.
- If you still have questions or need support, please contact our service department by e-mail (info@riva-filter.de) or by phone under the following number:



Tel. +49 7424 9014018

Maintenance

The filter system is basically low-maintenance. However, the maximum service life of the filter cartridges must be observed. Clean and lime-free fittings are the prerequisite for hygienically perfect drinking water. We recommend a cartridge change after 6 months (DIN 1988) as well as an expert leak test of the housing after a change has been carried out.

Interruption of use

After an interruption in use of 3 days or more, the filter should always be rinsed with approx. 5 liters of water before the first consumption of water.

If you do not use the filter for more than 6 weeks, please read our instructions for longer interruptions of use.

You can find it on the riva website under Knowledge / FAQ: https://riva-filter.de/faq/

Guarantee

The housing is covered by a 24-month warranty. Wear parts such as seals and filter cartridges as well as damage due to improper use are excluded.

Do not forget to change the cartridge - please use the sticker!

Use our removable riva sticker to make the next cartridge change unforgettable!

Simply turn the month for replacement upwards and apply the sticker on a smooth surface (inside of the cabinet, shelf, tile).

Example:

3 on top = next change in March

(3rd month of the year)

